
Photos of the SBach re-build, 3


When I last left the re-build I had formed the tunnel for the can. Going on from there:

Rear support bracket for the can made with silicon inserts:




Mounting supports for the U/C:

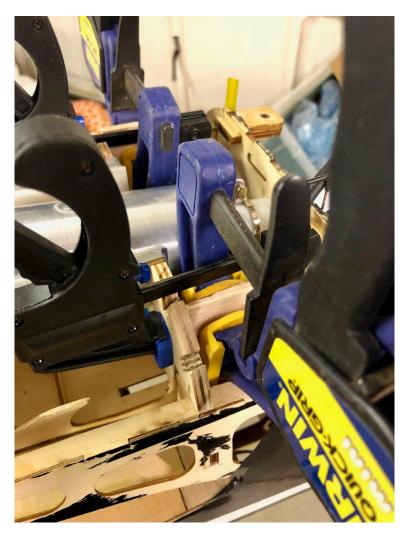

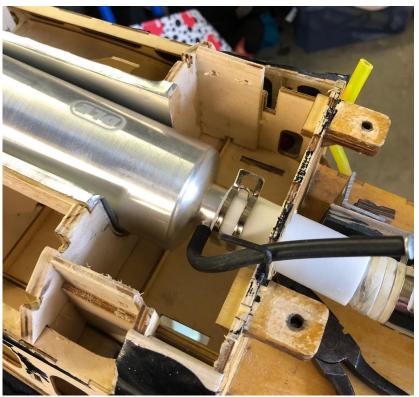

Ron's SBach, 3

U/C mounting plate scooped out for the canister:

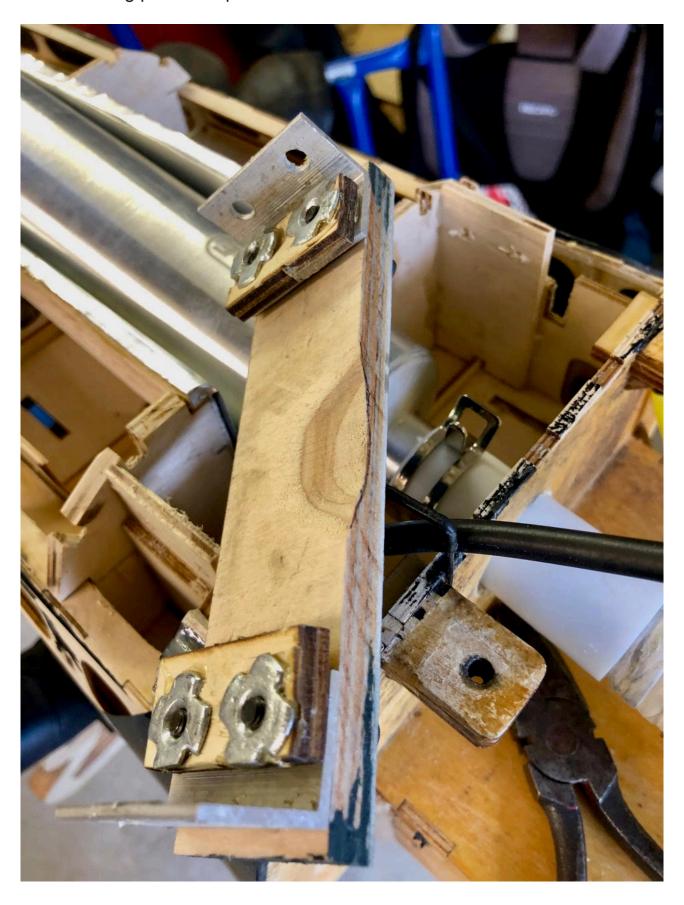

And temporarily fitted in place:



Next up, a couple of strengthening formers for the U/C which also provide some support for the firewall:





Ron's SBach, 3

The crash took out quite a bit of the structure around the U/C, here you can just make out the end of a former which originally spanned the fuse and provided support for the outer skin:



Ron's SBach, 3

Not only was the centre part demolished, the other end was also destroyed leaving not a trace:




Ron's SBach, 3

Out came the trusty scroll saw and a new piece made:

Fitted in place:



Using the offcut as a clamping former:

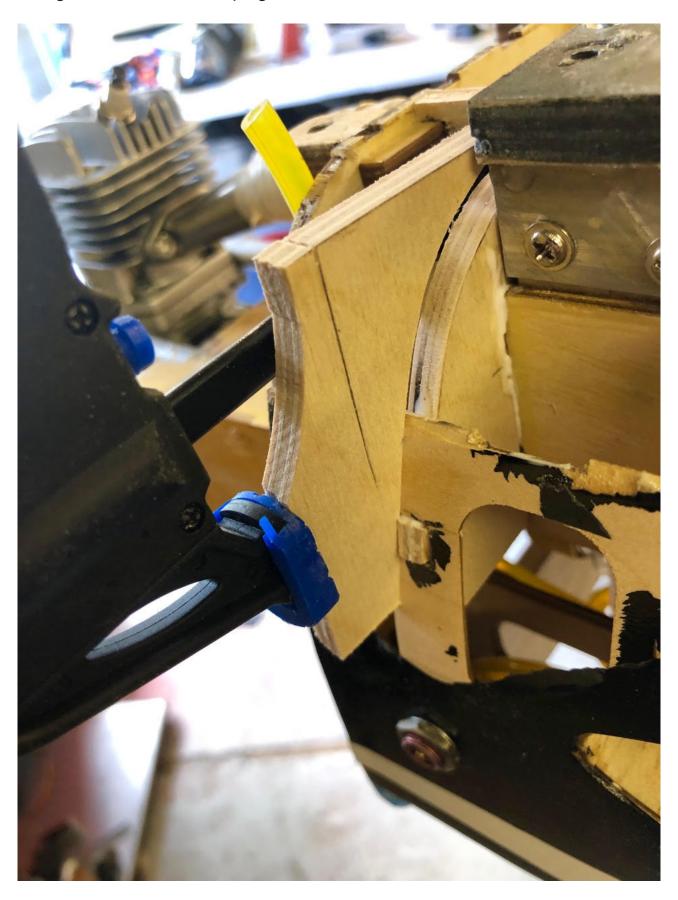

I also fitted some load spreader plates to the rear of the U/C former:



That completes the strengthening work around the U/C so it's onto the fitting of the longerons and balsa sheeting.